

MAXIMUS-3

UNIVERSAL FIT

HI-LIFT JACK SHOVEL HOLDER/MOUNT

(Designed to mount directly onto offroad Hi-Lift Jack)

PART #: UN2004SC

INSTALLATION STEPS

Estimated Install Time: 15 minutes

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED.



IMPORTANT

Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-size paste on all non-thread-lock bolts.

Parts List:

Shovel Mount/Holder
Rubber Bushing
Star Knob Nut

Qty



2
2
2



INSTALLATION STEPS

INSTALL AS SHOWN IN THE PICTURES BELOW:

1. Using the Rubber Bushings, mount the Shovel Holders to your offroad Hi-Lift Jack through the holes as shown below.
2. Use your shovel to determine the desired holders' locations and spacing on the jack.
3. Clamp your shovel in place using the Star Knob Nuts as shown, and tighten by hand to secure.

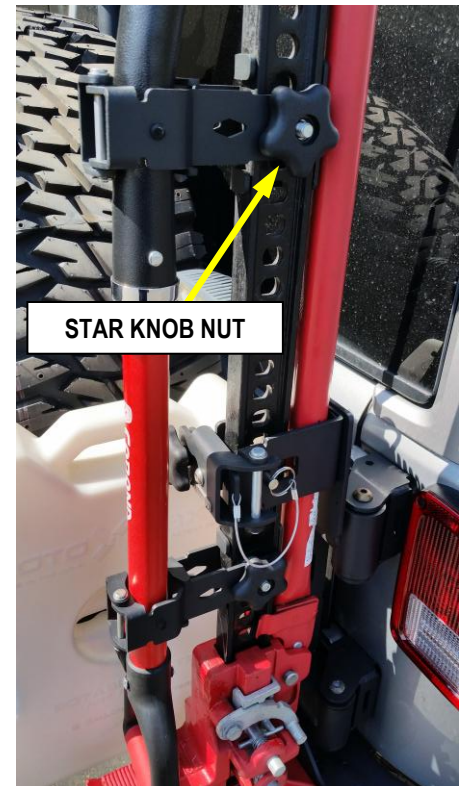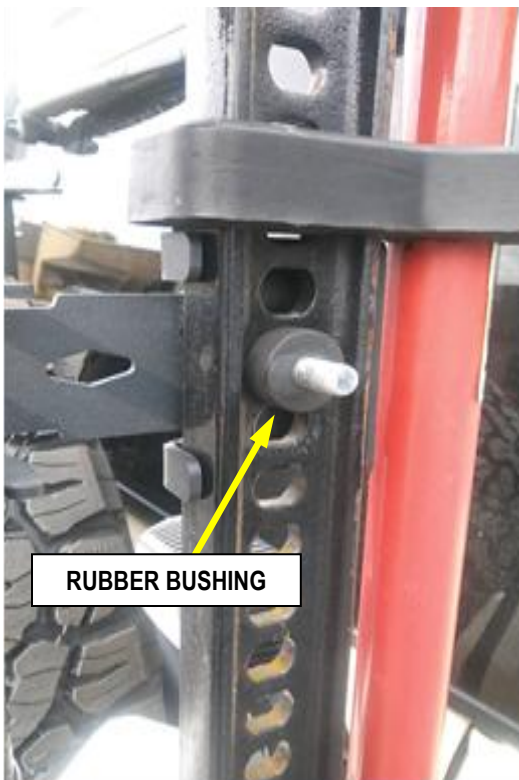

Your installation is complete. If you have questions regarding this installation, please contact us at customerservice@maximus-3.com, or call 248-821-6654