

MAXIMUS-3



JK WRANGLER

OFF-SET HOOK ANCHOR & OFF-SET FAIRLEAD CENTERING PLATE

(Fits JK Wrangler with OEM Factory Hard Rock Steel Bumper)

PART #: HR1015TP, HR1037HA-B, HR1037HA-R

INSTALLATION STEPS

Estimated Install Time: 15 - 30 Minutes

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED.



IMPORTANT

Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-size paste on all non-thread lock bolts.


| Parts List: | Qty |
|---|-----|
| Off-set Hook Anchor ore Centering Plate | 1 |

Tools Required

- ✓ Basic hand tools
- ✓ Allen Keys
- ✓ Metric Sockets/Wrenches

Hardware List

| | |
|--------------------------------------|---|
| M8 x 30 Truss Head Bolts – Stainless | 4 |
| M8 Flat Washers – Stainless | 4 |
| M8 Serrated Flanged nuts – Stainless | 4 |

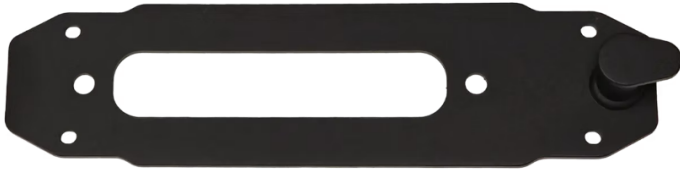

Off-set Hook Anchor




Off-set Center Plate

INSTALLATION STEPS

1- REMOVE THE RUBICON PLASTIC TRIM FROM THE BUMPER.

- A. Remove the **RUBICON** plastic trim covering the fairlead opening by cutting the 4 Push Retainer Clips using a pair of side cutters.
 - **Caution:** you may damage the trim cover if you try to save the metal retainers – just lift the clips, cut and peel out. You will not need the plastic trim again for this installation.

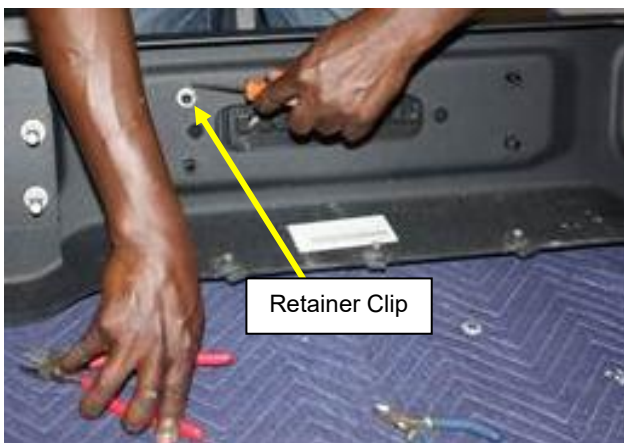

☛ **PLEASE NOTE:** Hard Rock Rubicon fairlead slot dimensions and shape differ from that of older models 10A and X Rubicon.



RUBICON Trim

2- BOLT YOUR MAXIMUSS-3 HOOK ANCHOR OR CENTERING PLATE ONTO THE BUMPER

- A. Place your Maximus-3 Off-set Hook Anchor or Center Place on the bumper and align the four mounting holes to existing holes on the bumper.
- B. Bolt down using supplied M8 button head bolts, washers and flanged nuts supplied. No cutting required.
- C. Bolt your Hawse Fairlead onto the bumper using hardware supplied by your Fairlead manufacturer.



3- RE-ASSEMBLE YOUR BUMPER & SKID PLATE.



Your installation is complete. If you have questions regarding this installation, please contact us at customerservice@maximus-3.com, or call 248-6061745